


This Article will show how to set channel Parallel and free channel Parallel on Neware Battery Testing System.


1.Settings → System settings




2.Display settings → Tick Set parallel and Free parallel → Click save

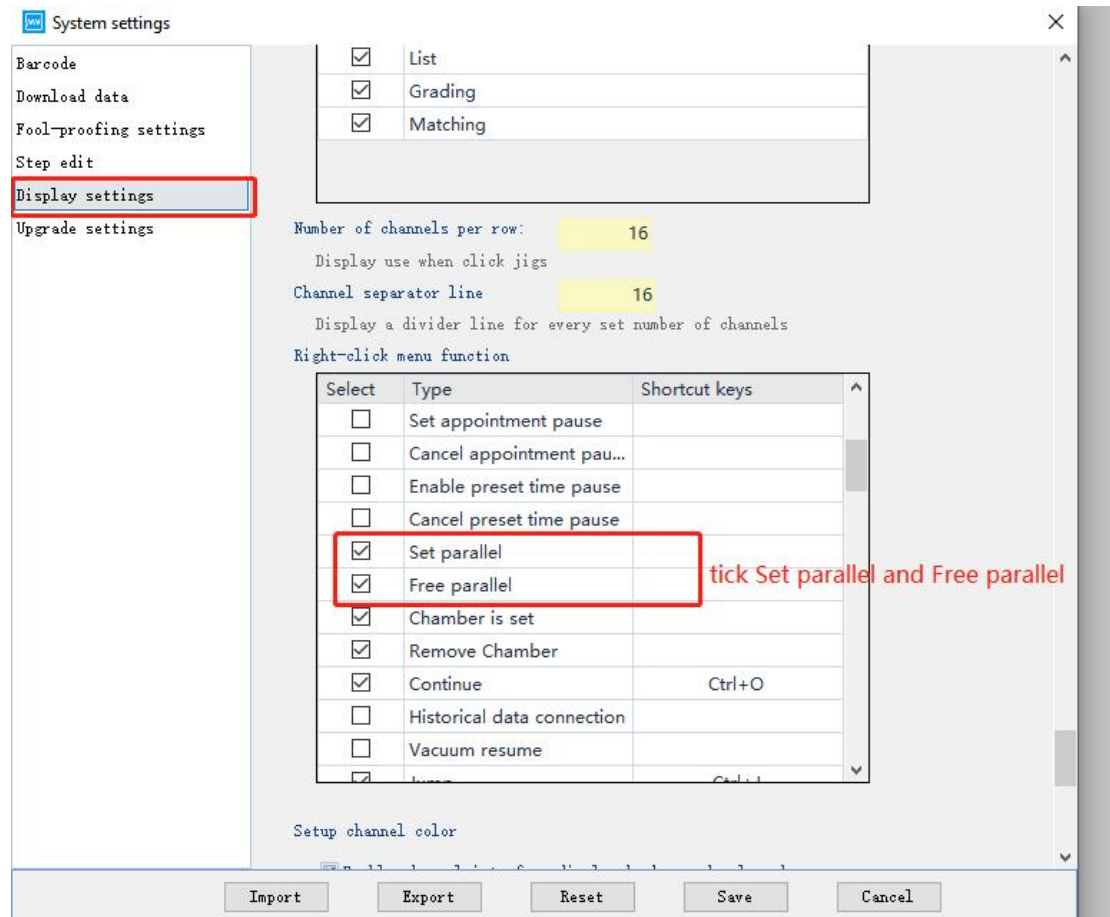


3.Select channels that are needed to be paralleled, right click for turn on the menu, click Set parallel.

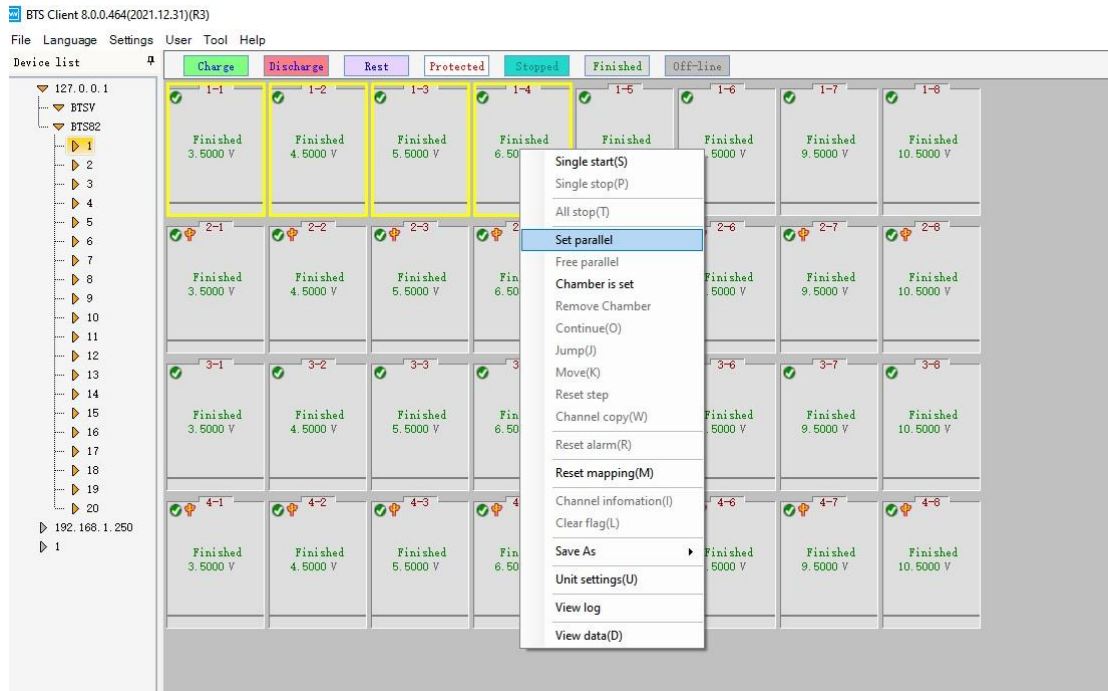

#### 4.Parallel done

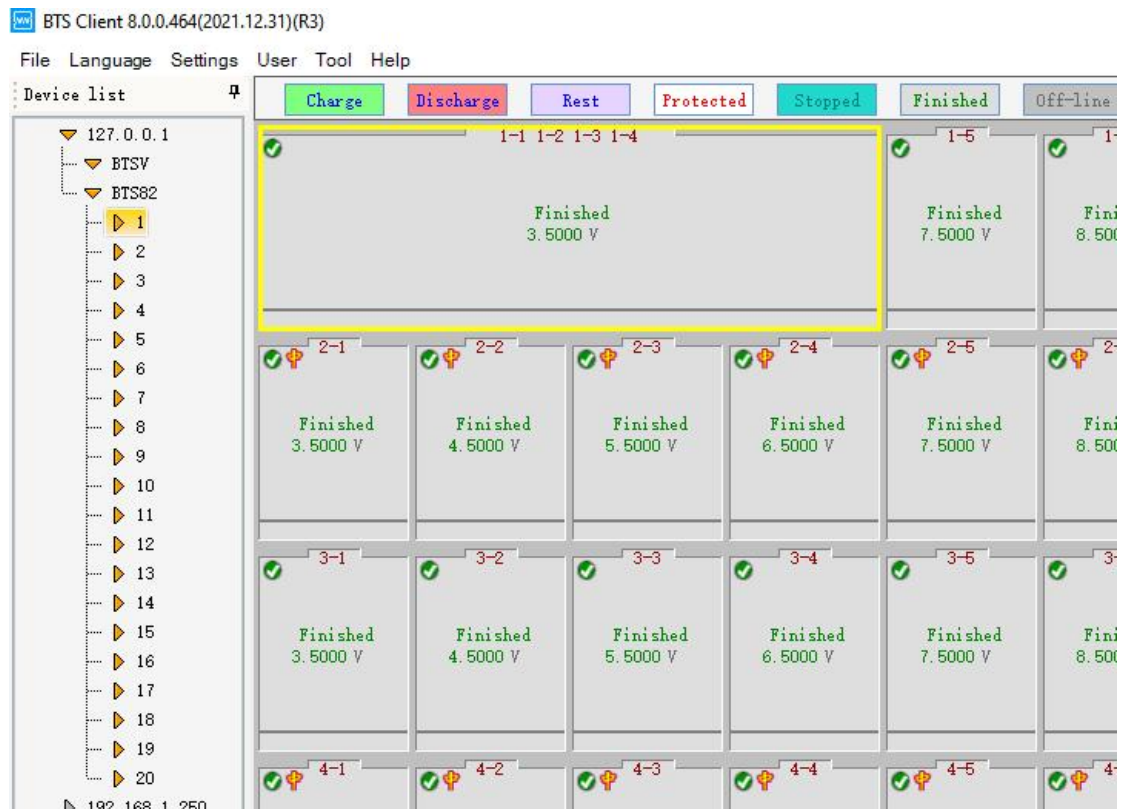

5.Below will show how to free parallel. Right click the paralleled channel, click Free parallel.

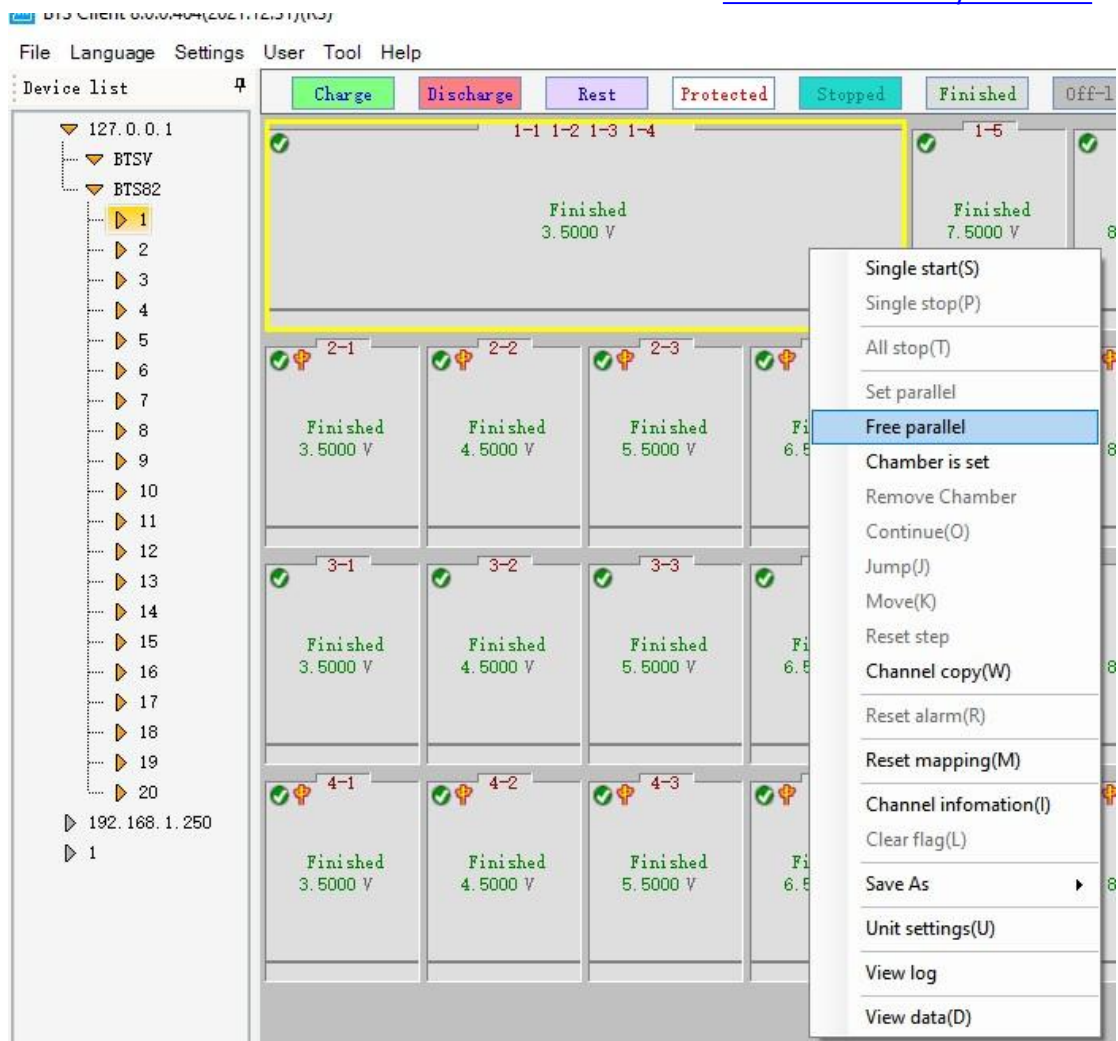

6.The paralleled channel is freed to single channels.

